


F4300 – Binary input 4.3” LCD indicator

Installation manual

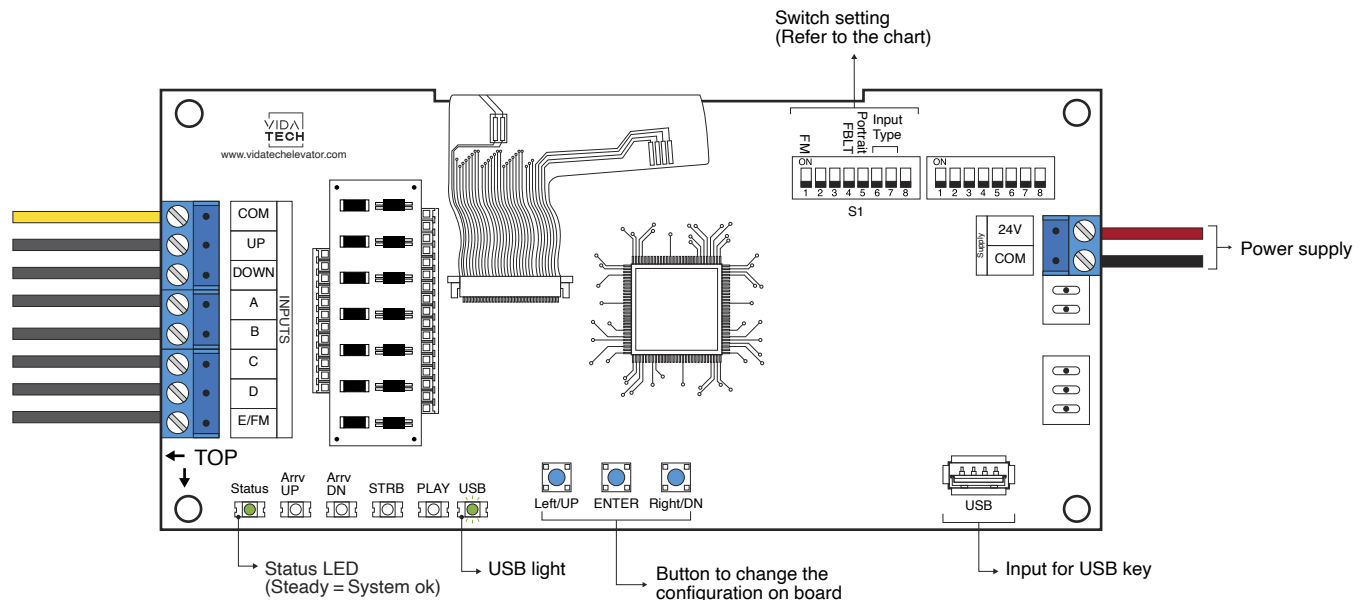

- Supply must be between 16VDC to 30VDC.
- VCI and Visual files must be placed on the root of a USB dongle, then connected to a powered indicator until the USB light stops blinking.
- Must be installed in COP or hall fixtures.
- To get the actual configuration of the indicator, connect a void USB dongle, then the configuration will upload into the dongle.
- You can modify the stair digit displayed by the indicator by modifying the .vci file with the Storm software, available on our website.
- You can modify the visual configuration with the Storm software available on our website.

- To change the configuration of the indicator on board :
 1. Press “ENTER” button to go to the main menu.
 2. Then choose “Edit stair digits” and press “ENTER”.
 3. Press “UP/DOWN” to select the floor to modify (1 to 127).
 4. Press “ENTER” to confirm the floor to modify.
 5. Press “UP/DOWN” to select the right character to display.
 6. Press “ENTER” to confirm the new character.
 7. Repeat the two previous step for the second and third character. Once completed, the indicator will return to main menu.

- Status LED :

Status LED	Description
Steady	System ok

- Switch setting :

SW #	#	Text	Description		
S1	1	FM	ON -> Blank the display in fire mode		
	2				
	3				
	4	FBLT	ON -> 100% backlight intensity OFF -> 80% backlight intensity (Backlight life enhanced)		
	5	Portrait	ON -> Portrait mode (If configuration supports this mode) OFF -> Landscape mode (If configuration supports this mode)		
	Input type		Binary	One wire	Gray code
	6			●	
	7				●
8					