


# F7010 – Binary 7” LCD indicator

## Installation manual

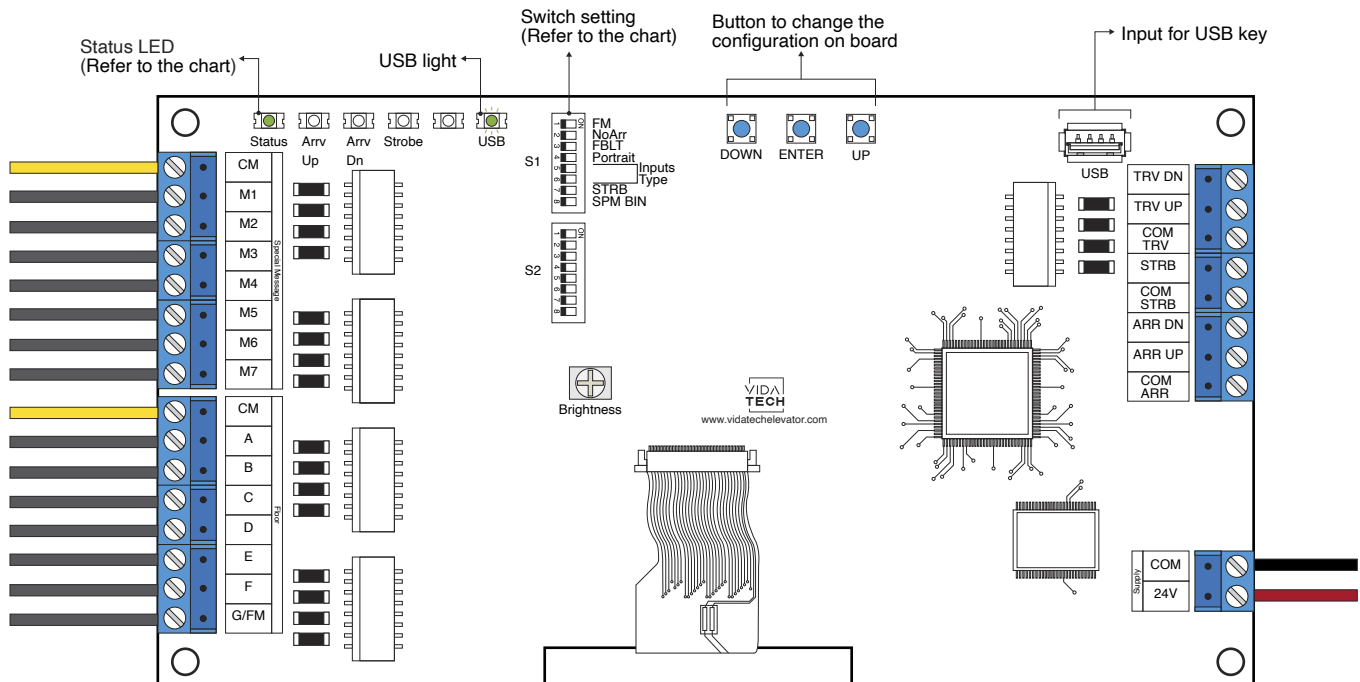

- Supply must be between 16VDC to 30VDC.
- VCI and Visual files must be placed on the root of a USB dongle, then connected to a powered indicator until the USB light stops blinking.
- Must be installed in COP or hall fixtures.
- To get the actual configuration of the indicator, connect a void USB dongle, then the configuration will upload into the dongle.
- You can modify the stair digit displayed by the indicator by modifying the .vci file with the Storm software, available on our website.
- You can modify the visual configuration with the Storm software available on our website.

\*This screen manages special messages\*

- To change the configuration of the indicator on board :
  1. Press “ ENTER ” button to go to the main menu.
  2. Then choose “ Edit stair digits ” and press “ ENTER ”.
  3. Press “ UP/DOWN ” to select the floor to modify (1 to 127).
  4. Press “ ENTER ” to confirm the floor to modify.
  5. Press “ UP/DOWN ” to select the right character to display.
  6. Press “ ENTER ” to confirm the new character.
  7. Repeat the two previous step for the second and third character. Once completed, the indicator will return to main menu.

- Status LED :

Status LED	Description
Steady	System ok
Slow Blink	System error

- Switch setting :

SW #	#	Text	Description			
S1	1	FM	ON -> Blank the display in fire mode			
	2	NoArr	ON -> Blank the arrow			
	3	FBLT	ON -> 100% backlight intensity OFF -> 80% backlight intensity (Backlight life enhanced)			
	4	Portrait	ON -> Portrait mode (If existing within the config) OFF -> Landscape mode (If existing within the config)			
			Binary	1 Wire/Floor	Gray Code	N/A
	5	Input		●		●
	6				●	●
	7	STRB	ON -> Strobe active Low OFF -> Strobe active High			
8	SPM BIN	ON -> Binary OFF -> 1 wire per message				