


F4321 – CANBus 4.3” LCD indicator with gong

Installation manual

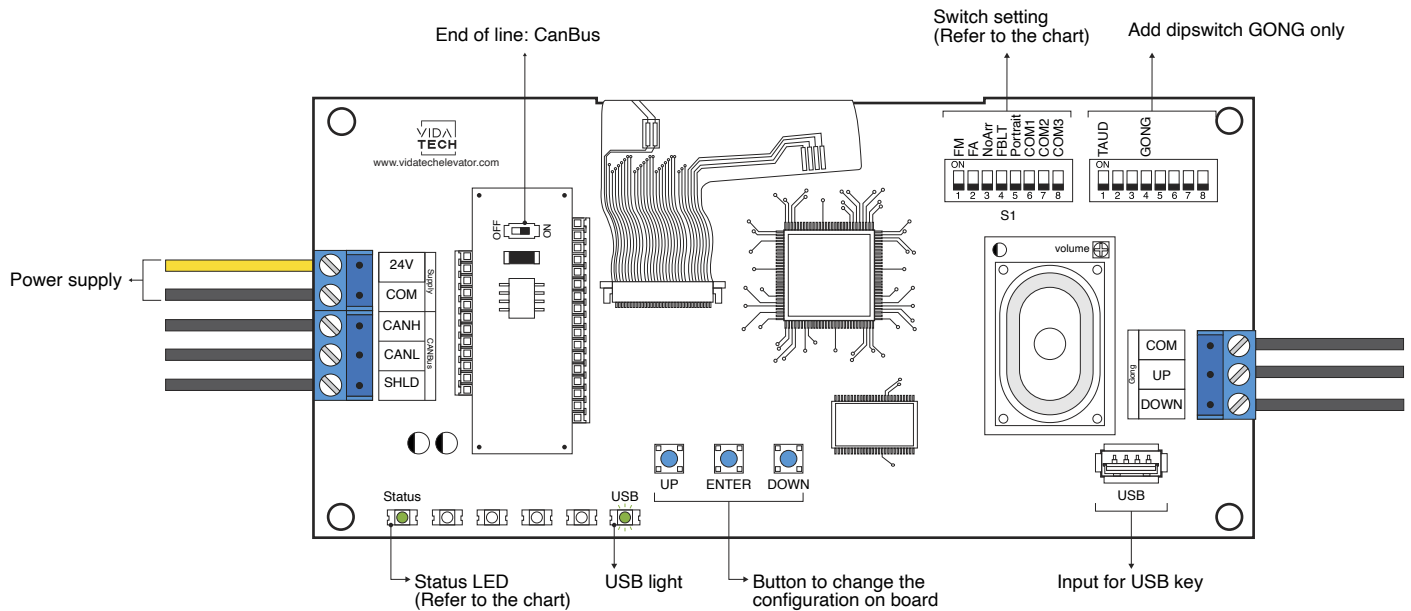

- Supply must be between 16VDC to 30VDC.
- Must be installed at landings.
- Press “ENTER” to go the main menu of the LCD, then navigate with “UP/DOWN” switches. Refer to the operation manual on our website.

IMPORTANT

1. Navigate to the “Floor Address” menu and select the address of the floor where the indicator is installed.
2. Activate GONG dipswitch to hear the gong when the elevator reaches the floor.
3. If you have external arrival arrows, then you need to activate the NOARR dipswitch to remove the Red/Green arrow from the LCD screen.

This screen manages special messages

▪ Status LED :

Status LED	Description
Steady	No communication
Slow Blink	System error
Fast Blink	Communication active with no error

▪ Switch setting :

SW #	#	Text	Description					
S1	1	FM	ON -> Blank the display in fire mode					
	2	FA	ON -> Blank the display in fire alternate mode					
	3	NoArr	ON -> Blank the arrow (Red/Green)					
	4	FBLT	ON -> 100% backlight intensity OFF -> 80% backlight intensity (Backlight life enhanced)					
	5	Portrait	ON -> Portrait mode (If configuration supports this mode) OFF -> Landscape mode (If configuration supports this mode)					
	Communication		CAN Vidatech	CAN JRT	CAN GAL	CAN elevator controls	CAN TKE	CAN Smartrise
	6	COM1		●		●		●
	7	COM2			●	●		
	8	COM3					●	●
S2	1	TAUD	ON -> Play all audio file saved in memory					
	4	GONG	ON -> Cabin gong active					