FLASH F43XX

4.3" LCD position indicators with audio



*Acrylic lens for screen included (Details p.9)



Applications

Car-OP position indicator
Hall position indicator



Display features

Up to 2 inches characters
Automatic centering
Up to 3 Digits
Viewing angle of 160 degrees
64k Colors
800 x 480 resolution
Portrait/Landscape



Audio features

3 watt amplifier
Voice annunciation
Arrival Gong
Fully configurable (WAV/MP3)
External speaker
Available only with CANBus



917 Mgr Grandin, Suite 304B Quebec City Québec, Canada G1V 3X8 1 418 476-4802 info@vidatech.ca TO ORDER:

F43XX

Input

"0" : Discrete

"2" : CanBus "6" : CanBus + vPixel Voice

"0": None

"2": Voice


"1": Arrival gong

F43XX – Binary input 4.3" LCD indicator

F4300

Binary input 4.3" LCD indicator

No voice

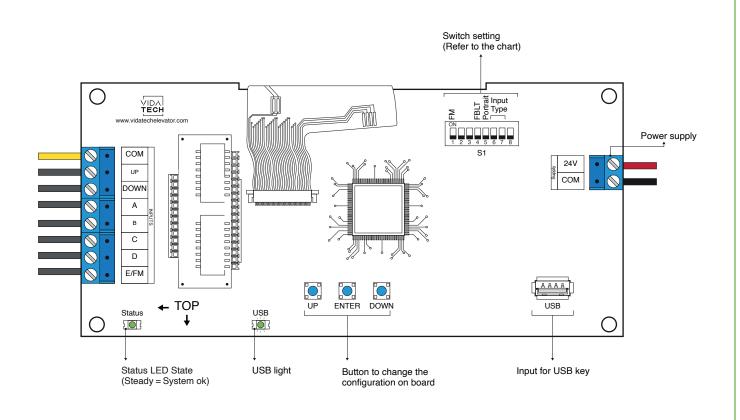


- Supply must be between 16VDC to 28VDC.
- VCI and Visual files must be place on the root of a USB dongle, then connected to a powered indicator until the USB light stops blinking.
- Must be installed in COP or hall fixtures.
- To get the actual configuration of the indicator, connect a void USB dongle, then the configuration will upload into the dongle.
- You can modify the stair digit displayed by the indicator by modifying the .vci file with the Storm software, available on our website.
- You can modify the visual configuration with the Storm software available on our website.
- · Switch setting:

SW #	#	Text	Description						
S1	1	FM	ON -> Blank the display in fire mode						
	2								
	3								
	4	FBLT	ON -> 100% backlight intensity OFF -> 80% backlight intensity (Backlight life enhanced)						
	5	Portrait	ON -> Screen Portrait (If configuration supports this mode)						
	Input type		Binary	One wire	Gray code				
	6			•					
	7				•				
	8								

F432X - CANBus 4.3" LCD indicator

F4321CANBus 4.3" LCD indicator with gong

No voice

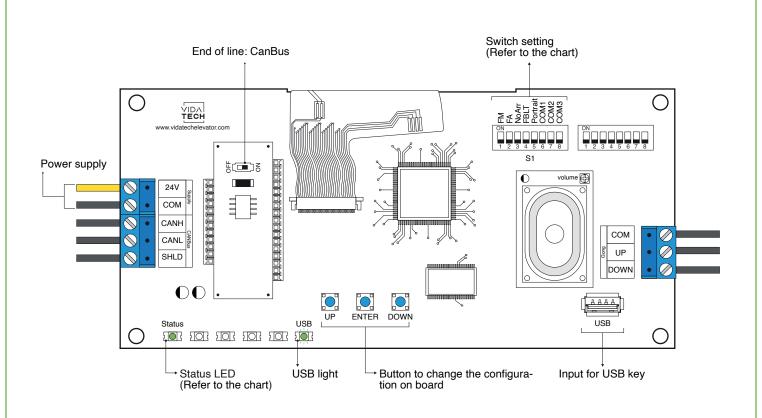

- Supply must be between 16VDC to 30VDC.
- VCI and Visual files must be place on the root of a USB dongle, then connected to a powered indicator until the USB light stops blinking.
- Must be installed in COP or hall fixtures.
- To get the actual configuration of the indicator, connect a void USB dongle, then the configuration will upload into the dongle.
- You can modify the stair digit displayed by the indicator by modifying the .vci file with the Storm software, available on our website.
- You can modify the visual configuration with the Storm software available on our website.
- Press ENTER to go the main menu of the LCD, then navigate with "UP/DOWN" switches. Refer to F4320 operation manual on our website.
- This screen manages special messages.
- To activate Gong option, user must program floor adress in the menu.
- · Switch setting:

SW #	#	Text	Description						
	1	FM	ON -> Blank the display in fire mode						
	2	FA	ON -> Blank the display in fire alternate mode						
	3	NoArr	ON -> Blank the arrow						
	4	FBLT	ON -> 100% backlight intensity OFF -> 80% backlight intensity (Backlight life enhanced)						
S1	5	Portrait	ON -> Portrait mode (If existing within the config)						
	Communication		CAN Vidatech	CAN JRT	CAN GAL	CAN elevator controls	CAN TKE	CAN Smartrise	
	6	COM1		•		•		•	
	7	COM2			•	•			
	8	СОМЗ					•	•	


F432X - CANBus 4.3" LCD indicator

F4320CANBus 4.3" LCD indicator

No voice

F4322
CANBus 4.3" LCD indicator with voice

With voice

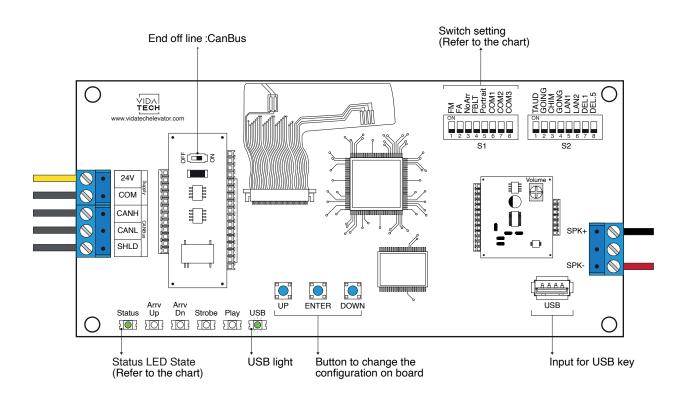


• This screen manages special messages.

- Supply must be between 16VDC to 30VDC.
- Speaker must be 4Ω to 45Ω , 5Watts minimum.
- Up to 12 minutes 38 seconds of message time.
- Speaker wire length must be less than 500 feet to prevent noise.
- .via files are for audio configuration. Only one .via file must be present on the USB dongle.
- .via and visual files must be place on the root of a USB dongle, then connected to a powered voice until the USB light stops blinking.
- · Must be installed in COP or hall fixtures.
- To get the actual configuration of the indicator, connect a void USB dongle, then the configuration will upload into the dongle.
- You can modify the stair digit displayed by the indicator by modifying the .vci file with the Storm software, available
 on our website.
- You can modify the visual configuration with the Storm software available on our website.
- Press ENTER to go the main menu of the LCD, then navigate with UP/DOWN switches. Refer to F4322 operation manual on our website.
- · Switch setting:

SW #	#	Text	Description						
	1	FM	ON -> Blank the display in fire mode						
S2	2	FA	ON -> Blank the display in fire alternate mode						
	3	NoArr	ON -> Blank the arrow						
	4	FBL	ON -> 100% backlight intensity OFF -> 80% backlight intensity (Backlight life enhanced)						
	5	Portrait	ON -> Screen portrait (If configuration supports this mode)						
	Communication		CAN Vidatech		CAN JRT		CAN GAL		
	6	COM1			•				
	7	COM2						•	
	8	COM3							
S1	1	TAUD	ON -> Play all audio file saved in memory						
	2	GOING	ON -> Going Up/Dn active						
	3	CHIM	ON -> Passing Chime active						
	4	GONG	ON -> Cabin gong active						
	Language		French	E	English	1 - Frenc 2 - Englis		1 - English 2 - French	
	5	LAN1			•			•	
	6	LAN2				•		•	
	7	DEL1	ON -> Add 1 second of silence after the strobe						
	8	DEL5	ON -> Add 0.5 second of silence after the strobe						

- Play Test option (TAUD): The device will play each voice file saved in the system in loop and will display the ASCII associated with the file playing.
- Going Option (GOING): The voice will play the file associated with the type « Going UP » or « Going Down » when STRB is asserted AND TRV UP or TRV DN.
- Chime Option (CHIM): The voice will play the file associated with the type « CHIME » each time the stair are changing.
- Gong Option (GONG): The voice will play the file associated with the type « Gong UP » or « Gong Down » when ARR DN or ARR UP are asserted.

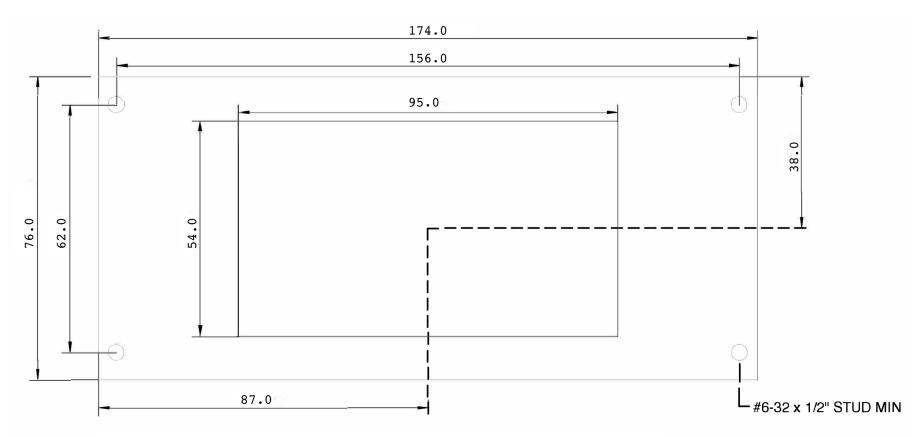

Board thickness: 24 (including lens)

Tolerance: Material: Finish: Scale: No. piece: Date: 2021-10-0		Title:	Unit:		
		Tolerance:	Material:	Finish:	
	TECH		Scale:	No. piece:	Date: 2021-10-01
Angular: Rev: Name: Page: 1/1		Angular:		Name:	-

The information on this technical drawing is the intellectual property of Vidatech

Reproduction is

